


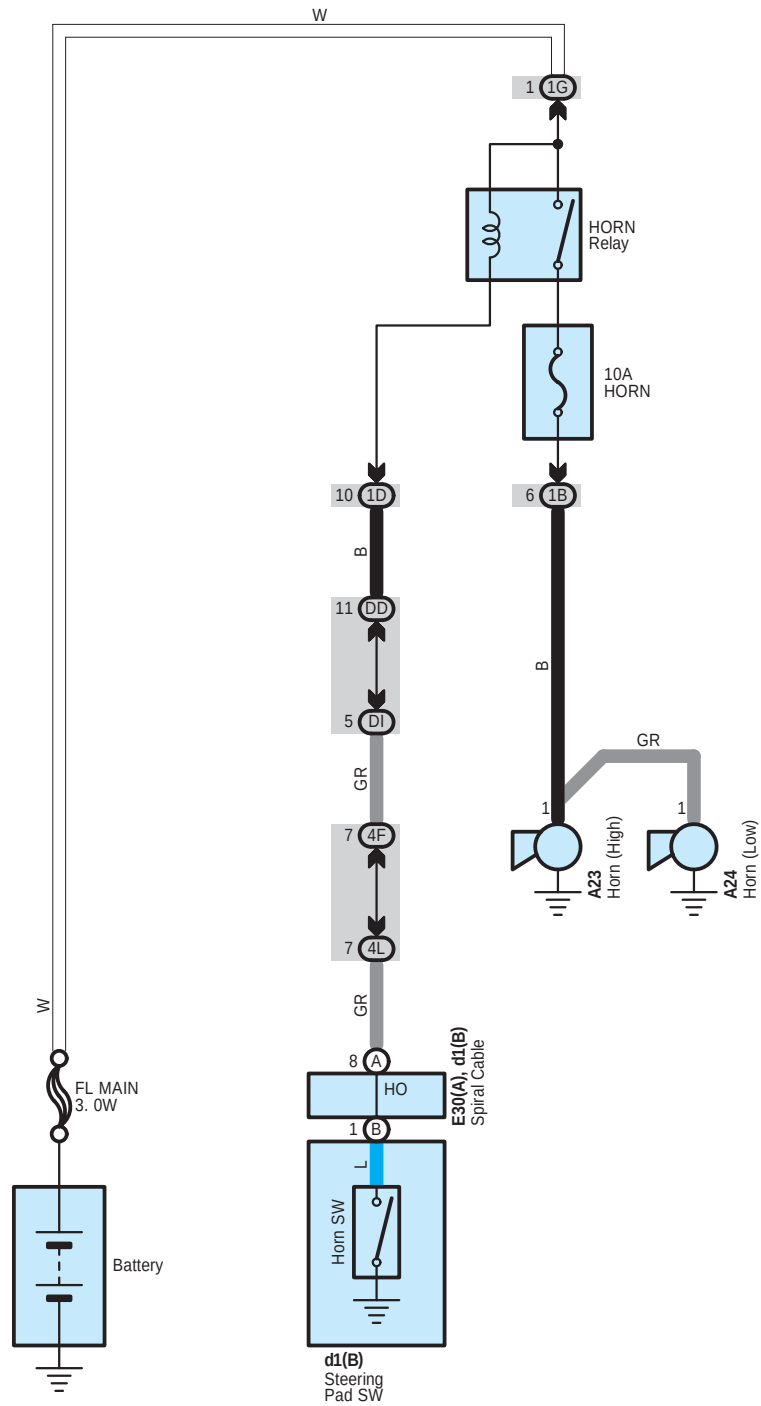

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A23	54	E30	A	58	
A24	54	d1	B	61	

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1D		
1G		
4F	42	Instrument Panel Wire and J/B No.4 (Instrument Panel Right)
4L		
DD	30	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
DI	31	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)